PELONIS®

SAFE-T-FURNACE CERAMIC HEATER

- **1500 Watts with Two Heat Settings**
- **Oscillating Base**
- **Overheat Thermal Protection**
- **Safety Tip Over Switch**
- **Inlet Air Overheat Protection**
- **Thermostat Control**
- **Power Indicator Light**
- **Carrying Handle**

UL®

Owner's Manual

PLEASE READ AND
SAVE THESE INSTRUCTIONS.

PELONIS USA LTD.

THE INVENTORS OF THE ORIGINAL
CERAMIC DISC FURNACE

CONGRATULATIONS!

The PELONIS Ceramic Heater you have just purchased is a safe and powerful heater, designed to heat a room after a few minutes of operation. The ceramic heater technology has been in use for many years and has been proven as an excellent source of safely heating whole rooms, while saving on heating bills.

Additionally, our ceramic heaters include an overheat protection system, a safety tip-over switch, and an Inlet air overheat protection system designed to ensure your safety.

Before using your new PELONIS Ceramic Heater, please take a few minutes to read these instructions, review the product limited warranty, and complete and mail the Warranty Registration Card.

Thank you!

Pelonis USA, Ltd.

WARNING! To reduce the risk of fire, electric shock, or personal injury, read all the instructions before using this heater.

CAUTION- High temperature, keep electrical cords, drapery, and other furnishings at least 3 feet (0.9m) from the front of the heater and away from the side and rear.

IMPORTANT INSTRUCTIONS

When using this appliance, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons.

1. Read all the instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as funiture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.
3. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
4. Do not operate the heater with a damaged cord or plug, or after the heater malfunctions, has been dropped, or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
5. Do not use outdoors.
6. This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate heater where it may fall into bathtub or other water container.
7. Do not run cord under carperting and do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area and where it will not be tripped over.

8. To disconnect heater, turn controls to Off, then remove plug from outlet.
9. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage to the heater.
10. To prevent a possible fire, do not block air intakes or exhaust openings in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked. Use the heater on flat, dry surfaces only.
11. A heater has hot and arcing or sparking parts inside. Do not use heater in areas where gasoline, paint or flammable liquids are used or stored.
12. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
13. Never clean this heater while it is plugged in. Do not immerse in water. To disconnect heater, turn control to Off, then remove the plug from the outlet by grasping the plug and pulling it from the outlet. Never yank on cord.
14. This heater includes an overheat protection system that shuts off the heater when parts of the heater are getting excessively hot. If the heater shuts off, immediately turn the heater Off and inspect for any objects on or adjacent to the heater that may cause high temperatures. DO NOT OPERATE THE HEATER UNTIL IT IS RESET. To reset the heater, turn it Off, unplug it from the electrical outlet, and wait five to ten minutes for the unit to cool down before plugging it back in and turning the heater On.

SAVE THESE INSTRUCTIONS

Operating Instructions

1. Plug the power supply cord into a wall outlet. (110/120VAC, 60Hz).

Important: This applicance has a polarized plug (one blade is wider than the other) to reduce the risk of electric shock. This plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

2. Set the thermostat to HI (fully clockwise).
3. Turn On the unit by selecting a heat setting (HIGH or LOW) or the FAN only setting from the Power and Settings Control knob. Note: When setting the heater on FAN, adjusting the thermostat will have no effect on performance. The thermostat feature works only with the heater set on HIGH or LOW.
4. Select a thermostat setting. Ambient temperature is regulated by adjusting the thermostat to a desired position. Allow the unit to operate and warm up the room. When the desired temperature is reached, turn the control knob counterclokwise until the heater turns off. This is your ideal setting. The heater will start automatically when the room temperature drops below this set point, and will turn off when the set point is reached.

Oscillating Base

To operate the oscillating base featured in this heater, just press the rocker switch located in the base of the heater.

Maintenance

1. Always turn Off the heater and disconnect the cord from the electrical outlet before cleaning your heater.
2. Light accumulated dust may be removed from the heater with a soft cloth or vaccum cleaner.
3. Wipe the exterior surfaces of the heater occasionally with a damp cloth (not dripping wet), using a solution of mild detergent and water. Dry the case thoroughly before operating the heater.

Caution: Do not allow water to run into the interior of the heater as this could create a fire or electric shock hazard.

4. The fan motor is factory lubricated for life, and will require no further lubrication.
5. Store heater in a clean dry place when not in use.

Warning: Any other servicing needed must be performed by an authorized service representative. Do not attempt to service the unit yourself.

CLOSE-UP VIEW

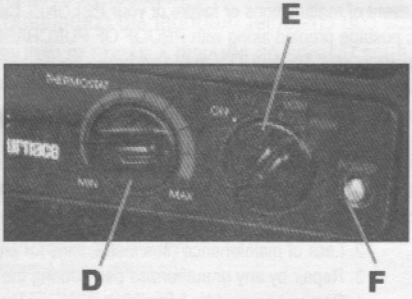

Features

A. "Cool-Touch" cabinet
B. Oscillating base
C. Oscillating base switch
D. Thermostat Control
E. Power and settings control
F. Power indicator light

Special Features

- Power Indicator Light - When the unit is turned On, the power indicator light will illuminate to tell you that the heater is functioning.

- Safety Tip-Over Switch - Your heater is designed to automatically shut-off when tipped forward or backwards. When returned to normal upright position, heat will automatically resume. This is a safety feature to avoid the possibility of fire should the unit be accidentally tipped-over.

- Overheat Thermal Protection System - Your heater includes a protection system that shuts off the heater if it overheats for any reason.

- Inlet Air Overheat Protection System - This heater will automatically shut off if the inlet air duct gets obstructed and causes the unit to overheat.

Note: There may be a trace of smoke or odor when the unit is first operated. Do not be alarmed, it will quickly evaporate and should not re-occur.

PELONIS Ceramic Heater

ThreeYear Limited Warranty

PELONIS USA, LTD., referred to hereafter as PELONIS USA, warrants as limited herein to the original purchaser of retail that each new PELONIS Ceramic heater shall be free of defects in material and workmanship for a period of three(3) years from the date of original purchase. This three (3) year warranty is limited to the ceramic elements, motor, and electric control circuit board.

In the event of malfunctions or failure of your PELONIS Ceramic heater, simply deliver or send the heater, postage prepaid along with PROOF OF PURCHASE, within the warranty period of three(3) year, to PELONIS USA, LTD. at the address specified below. PELONIS USA reserves the right to inspect the claimed defective part or parts to determine if the defect or malfunction complaint is covered by this warranty. PELONIS USA shall, within sixty (60) days after receipt of the product, at its opinion, repair and/or replace the defective part or parts free of charge. This warranty shall only cover defects arising from normal usage. PELONIS USA assumes no responsibility whatsoever if the Ceramic heater should fail during the warranty period by reason of:

1. Misuse, negligence, physical damage or accidents.
2. Lack of maintenance (see instructions for proper maintenance).
3. Repair by any unauthorized party during the warranty period.
4. Damage caused by connection to an improper input voltage (see specification label on the bottom of your heater).

PELONIS USA makes no further warranties or representations, express or implied except those contained herein. No representative or dealer is authorized to assume any other liability regarding the Ceramic heater. The duration of the implied warranty granted under State law, including warranties of merchantability and fitness for particular purpose are limited in duration should the duration of the express warranty grant it hereunder. PELONIS USA shall in no event be liable for direct, indirect, special or consequential damages.

Some states do not allow limitations on how long an implied warranty lasts, and/or the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

The purchaser should complete and return within fifteen (15) days from the date of purchase the warranty registration card supplied with each unit.

Should your Ceramic heater fail to operate under the terms of this limited warranty, return it postage prepaid along with PROOF OF PURCHASE to:

Customer Service Dept.
PELONIS USA, LTD.
103 Great Valley Parkway
Malvern, PA 19355 USA

Product Support

For additional information regarding the warranty and/or the service of this heater, or to obtain information on other PELONIS USA products, please call 1-800-842-1289 (M-F 9:00 am to 5:00 pm EST). For your convenience, we've included multiple levels of customer service and support. Please feel free to contact us with any questions and/or comments you may have.

Customer Service Dept.
PELONIS USA, LTD.
P O BOX 785
Malvern, PA 19355 USA

E-Mail: pelonis@mindspring.com website: http://www.pelonis.com

For your records, staple the sales receipt to this manual and record the following:

Serial Number: _____ Date of Purchase: _____

Place of Purchase: _____